

Gripper

7x	2x	4x	1x
1x	9x	2x	2x
5x	14x	1x	1x
1x	6x	2x	2x
1x	1x	1x	1x
1x	1x	1x	2x

1

2

3

1x	1x	1x	1x	3x
----	----	----	----	----

1x

3x	1x
----	----

4

5

6

7

8

1x	1x	1x	1x
----	----	----	----

4x	3x	1x
----	----	----

1x	1x	1x	2x	1x
----	----	----	----	----

1x	2x
----	----

1x	1x	2x	1x
----	----	----	----

9

10

11

12

Thread string under back pulley and secure to spool as shown.

Cut 60" of string and thread through pulley system as show in image to the right.

1x	1x
----	----

1x	2x	2x	2x	1x
----	----	----	----	----

4x	2x	2x	2x	2x
----	----	----	----	----

2x	1x
----	----



©2015 Rokenbok Toy Company. All rights reserved. ROKENBOK® is a registered trademark of the Rokenbok Toy Company.

The Rokenbok system was created with your child's best interests in mind. All Rokenbok products are designed for high quality, precision and safety, and conform to the requirements of ASTM F963.

Lifetime warranty on control electronics and building components. (see warranty for complete details). All Rokenbok machines are warranted against defects in material and workmanship for a period of six months from the date of original purchase when used under normal operating conditions.

Please retain this sheet as it contains important information regarding the use of this product. Product may vary from photography shown. The tracking information is located on the underside of the machine. For indoor use only.

Made in China

www.rokenbok.com

Rokenbok Toy Company

215 S. Highway 101, Suite 101 Solana Beach, CA (USA) 92075
Phone (858) 259-4433

1-888-4ROKBOK (1-888-476-5265)

e-mail: customerservice@rokenbok.com

P/N#50-10168-001

ROKENBOK

Teaching Kids to Make Things That Do Things

MAKER ROK ROBOTICS


WARNING: CHOKING HAZARD.
Toy contains small parts and small balls. Not for children under 3 years.

6x-AA NOT INCLUDED

08113
13+



MAKER ROK ROBOTICS

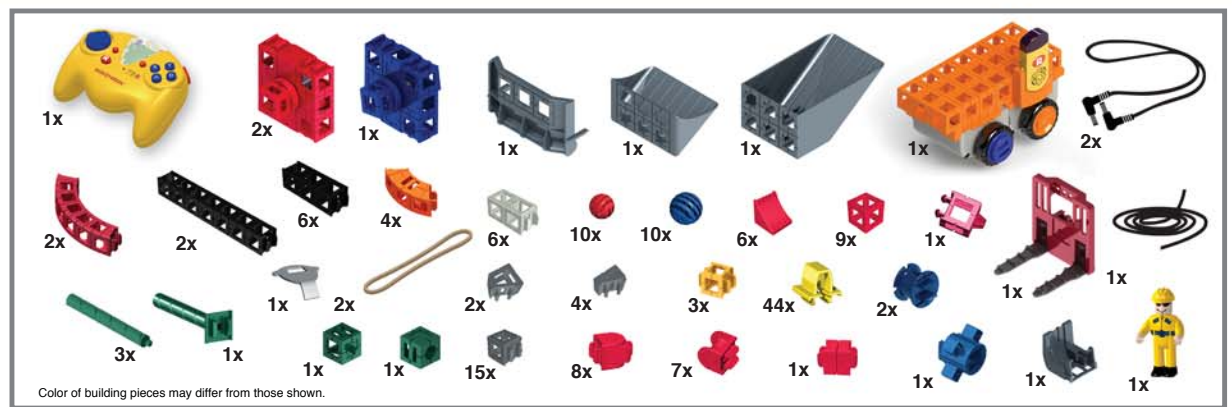


Color of building pieces may differ from those shown.


Battery Installation

- Rokenbok recommends premium alkaline batteries for use in your Rokenbok machines.
- Batteries are to be inserted with correct polarity as shown.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or nickel cadmium batteries.

Chassis

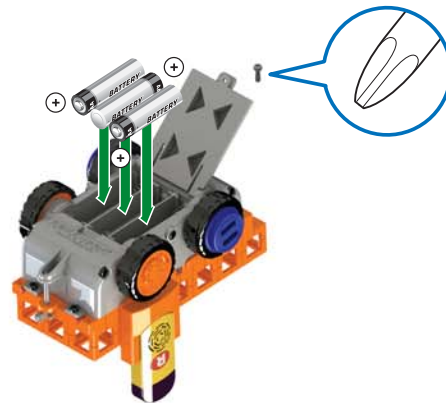

Controller

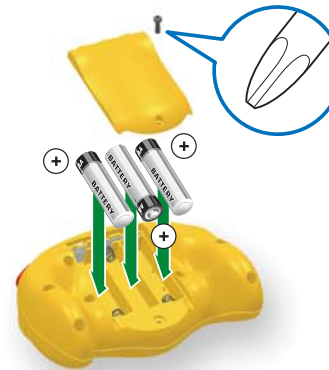

Select Your Machine

Press the on/off push button on your Rokenbok machine. The red led lights will come on and an ascending tone will be heard.

Press and hold the **R** select button on the ROK Star Controller and aim the controller at the machines receiver as shown. When a ringing chime is heard release the **R** button and the machine is in your control.

For optimal control, continue to aim the controller at the receiver on the Rokenbok machine.




Operation


Controls the Forward/Reverse




Controls Motor Ports

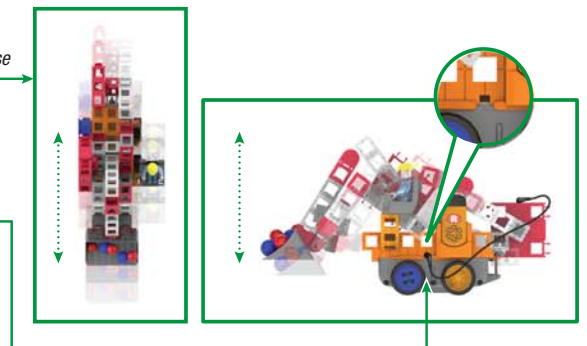

Front Loader

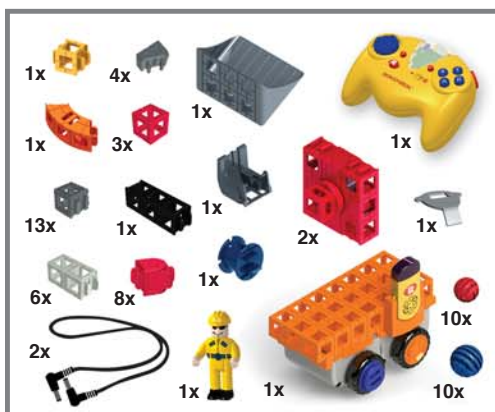

Front Loader (continued)

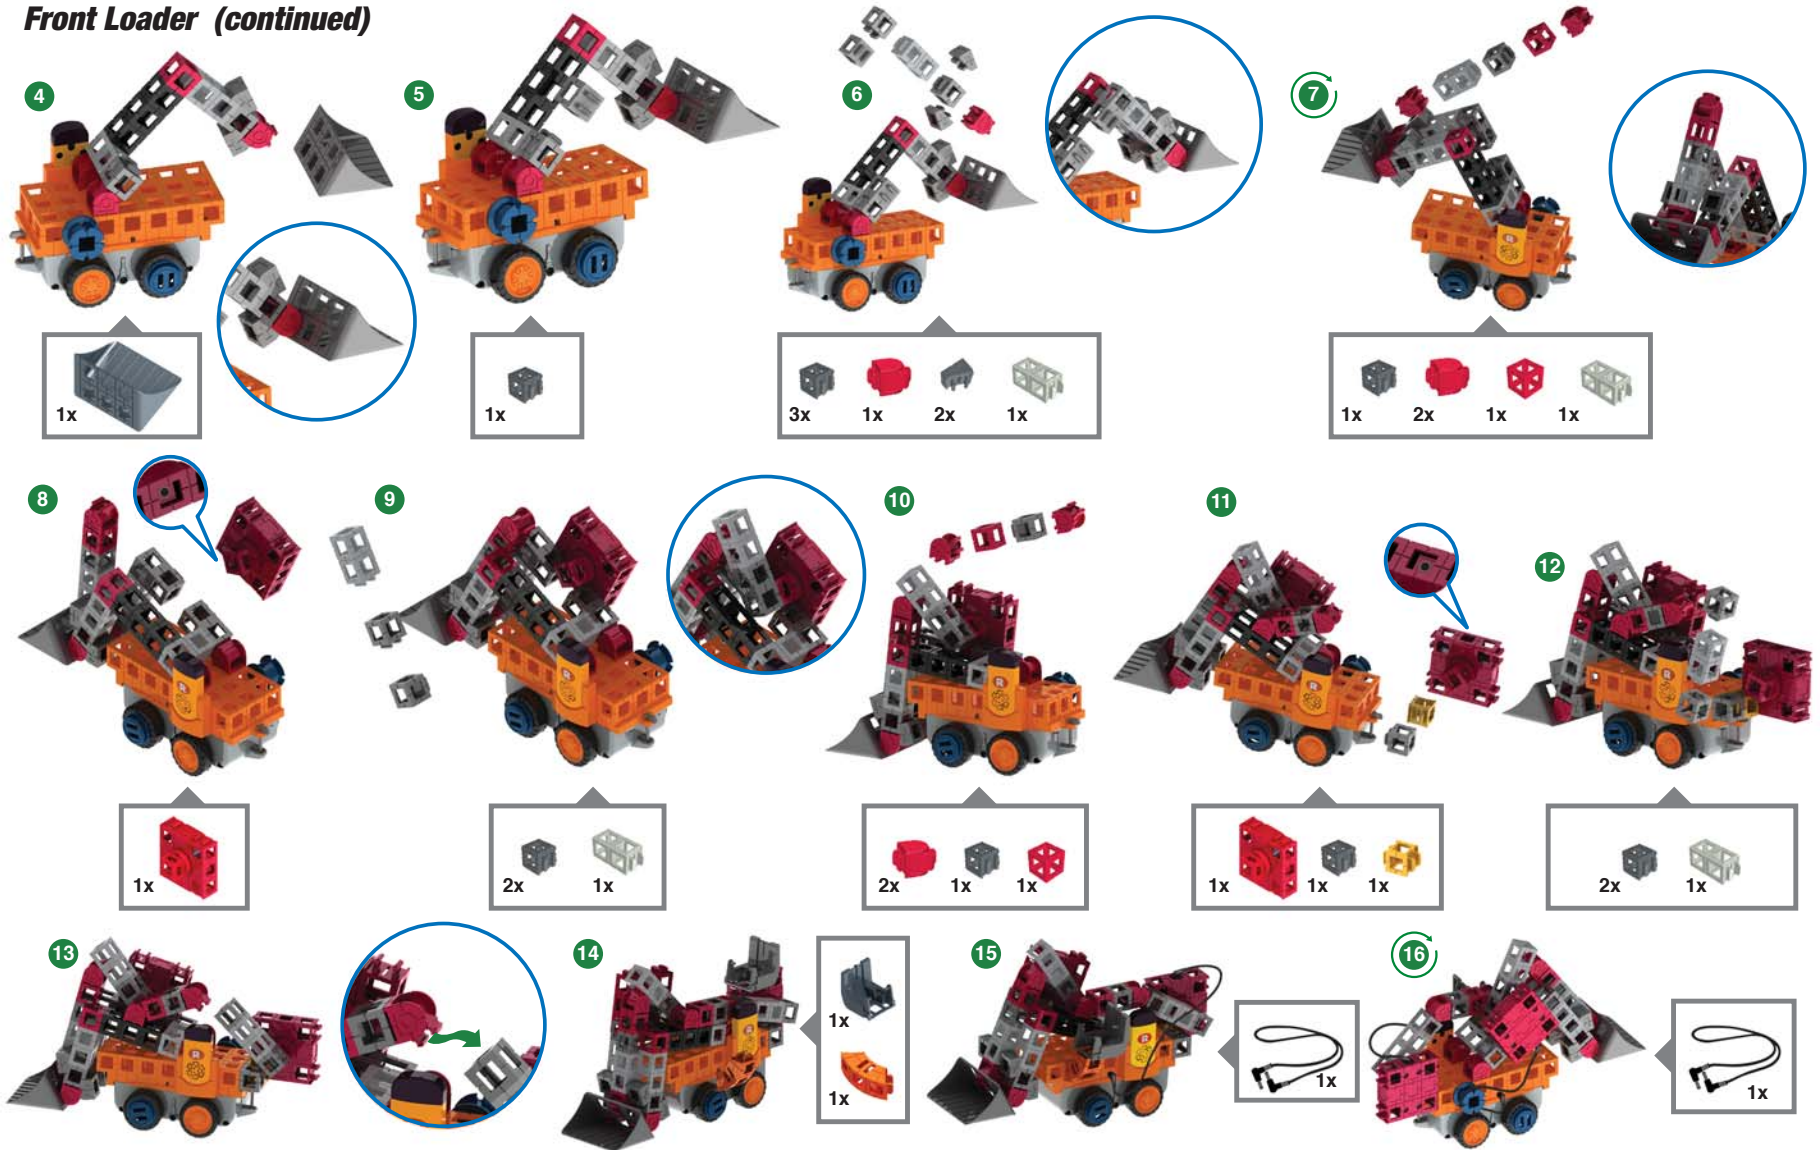

Dozer

